PROGRAMMABLE INDIVIDUAL URINAL SENSOR

The Panel Mounted Programmable Individual Urinal Sensor is available in brushed stainless steel. Adjustable settings include; run-on time, sensor range, purge and more. You will need to purchase a hand held programmer to adjust settings by yourself on site.

Fit the sensor in the panel directly above the urinal bowl, so that the sensor can detect a person standing in front of it. The sensor needs to constantly detect someone at the urinal for at least 10 seconds before going into flush mode (to prevent someone walking down the range of urinals and setting them all off accidently!). The flush will occur within a few seconds of the person walking away from the urinal.



Individual Urinal Sensor Kit Order Codes:

PsensU-M

Mains powered urinal sensor kit

Kit c/w

- 1 x Programmable Sensor
- 1 x Pre-wired 15mm Solenoid Valve
- 1 x Pre-wired 6V PSU (you need to provide a 3 amp fused spur)

 






Standard pre-wired 15mm G202 solenoid valve for water pressure 0.75 bar - 10 bar. Optional low pressure valves also available on request.



Hand Held Programmer



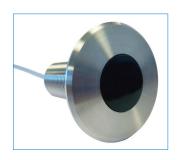

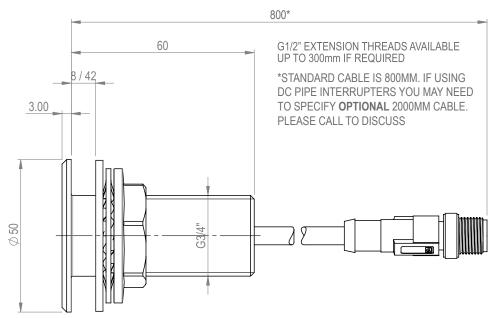

Technical Data:

Cut-out Hole Panel mounted (Ø28mm drill hole required).

Sensing Range Default 5. Adjustable 1 – 10.

Pre-Flush Wait Default 1 second. Adjustable between 1 – 2 seconds.

Pre-Flush Time Default OFF. Adjustable 1 – 3 seconds. When set to ON, this allows a "pre-flush" which is a short

flush as the person arrives at the bowl.

Main Flush Wait 10 seconds. NOT adjustable. Person must be constantly detected for at least 10 seconds before

the system will allow a main flush to occur when the person walks away again from the urinal.

Main Flush Time Default 2 seconds. Adjustable from 2, 2.5, 3, 3.5, 4, 4.5, 5, 5.5, 6, 6.5, 7, 7.5, 8, 8.5, 9, 9.5 &

10 seconds. The main flush occurs within a few seconds of the person finishing and walking

away from the urinal bowl.

Automatic Purge Default OFF. When set to ON the system will create a Purge Flush if the Urinal has not been

used for your choice of 6, 12, 24, 36, 48 or 72 hours.

Purge Run Times Default 4 seconds. Adjustable 2, 4, 6, 8 or 10 seconds. This is the length of time the valve will

open for on each Purge flush.



ROBERT PEARSON & COMPANY LTD

Post Office House, Post Office Lane Stockton, Warminster Wiltshire BA12 0SE

Telephone: (01985) 850954 Facsimile: (01985) 850112 E-Mail: sales@robertpearson.co.uk Website: www.robertpearson.co.uk